Resetting TN-450 PRINTERS Printer still says "Replace Toner" after changing cartridge?

Option 1

For models with fax and lcd screen and a numeric pad

Some models include: MFC-7360N, MFC-7460DN, MFC-7860DW

- Open the front door to access the toner
- Open door
- press Clear/Back key
- press * 0 0
- press OK

Do not choose anything for drum replacement. when drum replacement menu comes up, just press the * and then 00, then just press OK.

Option 2

For models with lcd screen but NO numeric pad or fax

Some models include: DCP-7055, DCP-7060D, DCP-7065DN, DCP-7070DW

- Open the front door to access the toner
- Press the "Clear" button.
- Press the "Start" button.

(When you press START the screen should clear.)

- Press the "\" or "Down Arrow button.
- Press the "↑" or "Up Arrow" button

(When you press the down arrow an "E0" should appear, which will change to "00" when you press the up arrow)

• Press the "OK" button.

(When it says "ACCPETED")

Close the front cover.

Option 3

For models with neither fax nor lcd screen

Some models include: HL-2240, HL-2240D, HL-2240DW, HL-2270DW, HL-2280DW

- Turn off the power switch on the machine.
- Open the front cover.
- While holding down the GO button, power the printer back on. Continue holding the GO button until you confirm the Toner, Drum and Error LEDs are on and the Ready LED is off.
- When the Ready LED turns off, release the GO button. All of the LEDs will turn off.
- After all LEDs turn off, press the GO button 2 times. Toner, Drum & Error LEDs will turn on.
- Press the GO button 7 times. All LEDs turn off and then the Error LED will start flashing.
- When the Error LED starts flashing, close the front cover. The Error LED will turn off and the Ready LED will flash briefly. Verify the Ready LED is on steady and the Toner LED is off.
- Restart Cpu, Restart Printer (Turn OFF then ON).

Option 4

Put on continue mode

Just go to "General Setup" -> "Replace Toner" and change the value from "Stop" to "Continue".