


# HP 134/135/136/137series TRANSFER INSTRUCTION

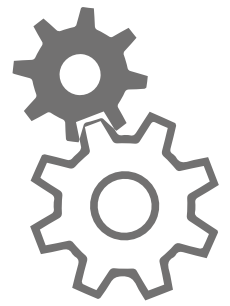


## Tools:



Scissor





Chip recycle drill






tweezers




1. Pull out the chip recovery drill screw and install it on the OEM toner cartridge.

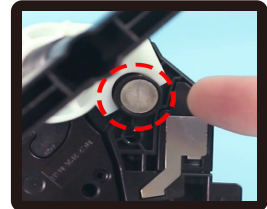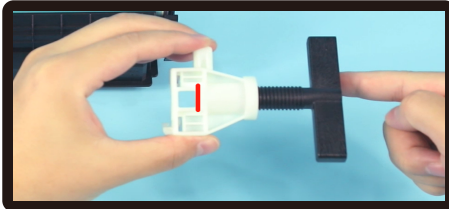



2. Rotate the chip recovery drill screw to the bottom to extrude the chip.

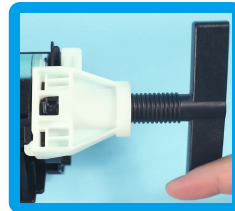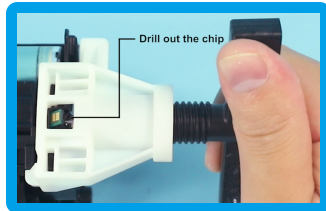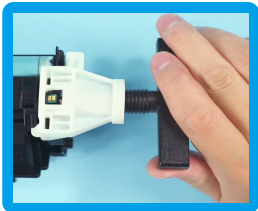


3. Exit the recovery drill screw and remove it, and take out the chip.  
Use cutting pliers to evenly trim the protruding plastic blocks around the chip and at the bottom.

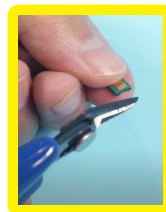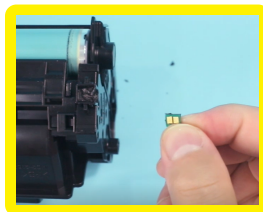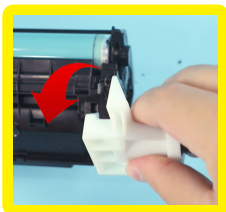

4. Put the chip into the new toner cartridge in the correct direction.

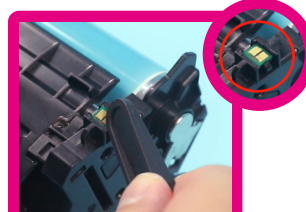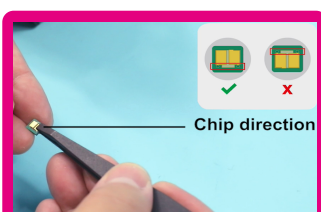

# HP 134/135/136/137series TRANSFER INSTRUCTION

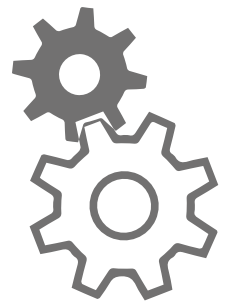

**Note:** After installing the cartridge, the printer will display a warning message, as in the photos shown below. Please note, the warning message will not interfere with the printing process, and you may disregard it.



**Note:** When printing, a pop-up warning message will be displayed on your computer screen. To disable the message, click the Snooze button and select "2 Months" from the dropdown menu. The message will be disabled for a selected period.

